

NEW PRODUCTS

TIRES, TUBES & WHEELS

HELMETS & APPAREL

ATV/UTV ACCESSORIES

MOTORCYCLE ACCESSORIES

RODS, BEARINGS, CAMS & CYLINDERS

AXLES, CHAINS, SPROCKETS & DRIVE

ENGINE & PERFORMANCE

ELECTRICAL & BATTERIES

DVD

SPECIALTY TOOLS

PWC

3-WAY T-WRENCH

PART #	DESCRIPTION
ALP72-1023	3 WAY WRENCH 8-10-12MM

◇Great for travel, and/or working at home, this "T" style wrench contains #8, #10, #12mm 6pt sockets, all in one handy tool.



EXHAUST SPRING TOOLS

PART #	DESCRIPTION
ALP72-1161	HD SPRING PULLER, CENTERSTAND/ SIDESTAND
ALP72-1164	MUFFLER SPRING PULLER

◇Exhaust spring puller makes removing exhaust springs a simple task.



SMALL CHAIN BREAKER

PART #	DESCRIPTION
ALP72-1003	CHAIN BREAKER, REX TYPE

◇The Roller Chain Breaker for ANSI chain sizes 25 through 60.
◇Take apart chain ANSI size 25 through 60 quickly and easily without hammers or punches.



TIRE LEVERS

PART #	DESCRIPTION
ALP72-1038	MICHELIN TYPE TIRE LEVER
ALP72-1034	9" TIRE LEVER

◇A chisel tip makes it easy to insert beneath the bead, and the slightly thicker shape keeps the tire lever from slipping.
◇The levers' bold shape makes it easy to remove the tightest of tires without bending or breaking.

BLIND BEARING REMOVAL KIT

PART #	DESCRIPTION
ALP72-1631	BLIND BEARING REMOVAL SET

◇Set includes 30, 25, 20, 17, 15, 12, 10 and 8mm collets.
◇2 pound slide-hammer.
◇Crossbar type shaft allows easy collet removal.
◇Necessary tool for most transmission rebuilds.
◇Can be used for wheel bearing removal.



CRANKCASE SPLITTER

PART #	DESCRIPTION
ALP72-1635	CASE SPLITTER SET, FOR VERTICAL SPLIT CASES, MOVEABLE FINGERS ALLOW MULTI FIT

◇A must for disassembling vertically split 2 and 4-stroke crankcases.
◇Makes crankcase disassembly easy by safely pushing the crank assembly out of the case halves.
◇Adjustable arms permit it to be used on a variety of bolt patterns.
◇Includes both 8mm and 6mm mounting bolts.



CABLE LUBE TOOL

PART #	DESCRIPTION
ALP72-1015	CABLE LUBRICATOR
ALP72-1164	MUFFLER SPRING PULLER

◇Easy way to lubricate the cables on your machine.
◇Attach tool to either end of cable, insert the nozzle tube from your cable tube and spray.
◇Cables do not need to be removed from machine.

